

Smart Toilet

Installation Manual

- Thank you for choosing our products. Please read the instructions carefully before installation and keep it available for future maintenance or reference.
- The internal images in the manual are for reference only, and the actual product shall prevail.

CONTENTS

Installation	02
Cautions And Warnings	02
Technical Specification	07
Packing List	08
Part List	09
Toilet Installation	11
Before Using	15
Function Description	16
Maintenance	21
Daily Maintenance	21
Others	23
Troubleshooting Guide	23
Warranty Instructions	25

CAUTIONS AND WARNINGS

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Please read this statement thoroughly and ensure its proper use.
Strictly adhere to all written cautions and warnings provided.

Meaning of the Marks:

-  **DON'T:** This symbol indicates a prohibited use of the product.
-  **MUST:** This symbol is used to indicate a required step in the use of this product.

 DONT DISASSEMBLE	Never disassemble, repair or alter. Do not use tools in areas other than designated in this manual. • Doing so may cause fire, electrical shock, overheating, short circuit or equipment failure.
 DONT SPLASH WATER	Do not get any water or cleaning solution on the main unit or connection of power cord. • Doing so may cause fire, electrical shock, heat or short circuit. • Doing so may cause the product to crack resulting in injury or water damage.
 DONT	Do not use the product if a malfunction occurs. • In case of malfunction or other problems, be sure to cut off power by switching to OFF. Close the water shut off valve to stop water supply. Possible malfunctions: • Water is leaking from a pipe or the main unit. • The product is cracked or broken. • The product makes a strange noise or emits a strange odor. • The product emits smoke. • The product is abnormally hot.

CAUTIONS AND WARNINGS

 DON'T	• The toilet seat is out of place. Continued use of the product after a malfunction could result in fire, electrical shock, overheating, short circuit, injury, or water damage.
	• Continued use of the smart toilet after a malfunction could result in fire, electrical shock, overheating, short circuit, injury, or water damage. Please contact professionals for assistance.
	Use tap water only. • Using other types of water may cause irritation to the skin and malfunction of the product.
 STOP	Do not use a loose or unstable power socket. • Doing so may cause fire or electrical shock.
	Insert the power plug into an AC socket rated for 220V to 50Hz and 10A or above. Failure to do so could result in fire or electrical shock. • If the power exceeds the socket's specification, it may cause overheating and potentially lead to fire.
	Do not perform any actions that may damage the power plug. Avoid striking, yanking, twisting, excessively bending, damaging, altering, or heating the power cords. Additionally, do not place any heavy objects on, bind, or pinch the power cords. • Using a damaged power cord may result in a fire, electrical shock, heat or short.
 MUST	This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product. When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom. • Failure to do so may cause fire or electrical shock. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or another qualified professional to avoid hazards.

 MUST	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
	Children being supervised not to play with the appliance. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. • To prevent low-temperature burns, please do not sit on the toilet for a long time.
 GROUND WIRE	This appliance must be grounded. Connect this product only to a properly grounded power supply unit (device). • Improper connection may cause electric shock.
 MUST OBEY	Do not raise the toilet seat or lid while objects are resting on top of the unit. • Doing so may cause the main unit to come loose and fall, resulting in injury. Do not lean on cover when use this device to prevent product from damage.
 NO FIRE	Keep cigarettes and other open flames away from the product. • Failure to do so may cause fire.
 STOP	Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or main unit. Also do not place any heavy objects on the toilet seat, toilet lid or main unit. • Doing so may cause the main unit to crack or come loose and fall, resulting in injury. • Doing so may damage the product and cause injury or water damage.
	Never obstruct the warm air openings of the product with fingers or any other items. Ensure that the warm air openings remain unobstructed to prevent electric shock, personal injury, or damage to the product.

CAUTIONS AND WARNINGS

STOP	Do not fold or crush the water supply hose; Or damage by cutting with a sharp object. • Doing so may cause water leaks. When maintaining the plastic parts (main unit etc.) or the water supply hose, use a neutral kitchen detergent diluted with water. Do not use any of the following: toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser, or nylon scrubbing brush. • These items may damage or crack the plastic, potentially causing injury or malfunction. • Additionally, these items could damage the water supply hose and result in a water leak. To prevent a sudden water leak, never remove the water filter drain valve while the shut-off valve is open. • Doing so will cause water to spurt out unexpectedly.
MUST OBEY	When installing the water filter drain valve, make sure that it is securely tightened in its proper position. • Failure to securely tighten it may cause a water leak. If a water leak occurs, always close the shut-off valve immediately. When the ambient temperature is expected to drop to 0°C or below, take measures to prevent damage to the pipes and hoses due to freezing. • Frozen water pipes can cause the main unit and connected pipes to crack, potentially resulting in a water leak. • To avoid this, regulate the room temperature to ensure that the pipes and hoses do not freeze during cold months. • Failure to properly secure and tighten connections may also cause a water leak. • Avoid exposing the product to direct sunlight, as this may cause changes in color or malfunction. • Do not urinate on the main unit, toilet seat, or wand, as this may result in malfunction or discoloration.

MUST OBEY	• Disconnect the power cord during thunderstorms. • When the product will not be used for a long period of time, close the shut-off valve and then turn off the power to the product.
	• Use the water supply hose provided with the product. Do not use old or existing hoses.
	• During daily use of the remote control, keep it away from water to prevent water from getting inside the remote control. And please return it to the holder after each use. • When the product has been used for a long period of time, replace the batteries in the remote control.

WARNING

- This douche seat must be installed with appropriate backflow protection conforming to the national construction code volume three.
- Installation can only be conducted by the authorized license plumber following NCC Part Three (PCA) with appropriate high-hazard cross connection control.
- Our products internally installed low hazard backflow devices complying with AS/NZS 2845.1. According to NCC Part Three (PCA), WMTS-051: 2020 and AS/NZS 3500.1, our products must be externally installed a high-hazard backflow protection device. We recommended the Reduced Pressure Zone Device (RPZD) to be externally installed, below figure as an example.

The diagram illustrates a plumbing setup for a toilet seat douche. It shows a water meter at the top right, with a hose tap and kitchen sink below it. A drinking water service line runs vertically. A non-drinking water service line branches off to the left. A cistern connection is shown for the toilet seat douche. A Reduced Pressure Zone Device (RPZD) is installed on the non-drinking water service line. The RPZD is connected to the cistern connection and the toilet seat douche. The diagram is labeled 'Example of Zone Backflow Prevention Setup'.

TECHNICAL SPECIFICATIONS

Product Name	Smart Toilet
Rated Voltage	220-240V
Rated Frequency	50Hz
Rated Power	1150W
Flush Volume	4.5L/3L
Waterproof Level	IPX4
Warm Water Temperature	4 levels (Room Temperature- 40°C)
Warm Air Temperature	4 levels (Room Temperature- 60°C)
Heated Seat Temperature	4 levels (Room Temperature- 41°C)
Operating Temperature	5-35°C
Warm Water Heating Method	Instant Heating
Water Entry Temperature	1-35°C
Supply Water Pressure	0.08MPa-0.5MPa
Water consumption	4 Star
Codes/Standards	IEC/EN 60335-1 IEC/EN 60335-2-84 AS/NZS60335.2.84


*Power value testing condition:

Water Pressure: 0.2 MPa, Inlet Water Temperature: 15°C.


Water Flow: 650 ml/min

- Maximum temperature of the water supplied by the product for hygiene purposes: 42°C.
- No further notice will be provided if any technical specifications change due to product improvement or technical updates. All actual technical specifications are subject to the final product.


PACKING LIST

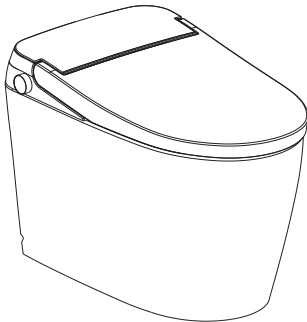


Main Unit

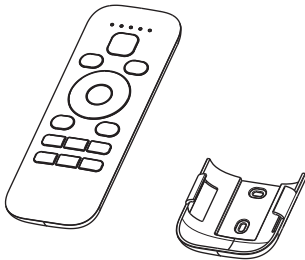


Remote Control Components

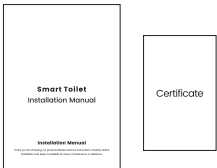

Installation Manual and Certificate Of Competency

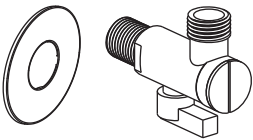


Angle Valve

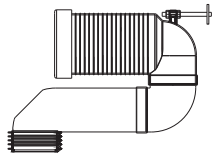


A set of sewage pipe components with corresponding hole spacing

PART LIST


Left side

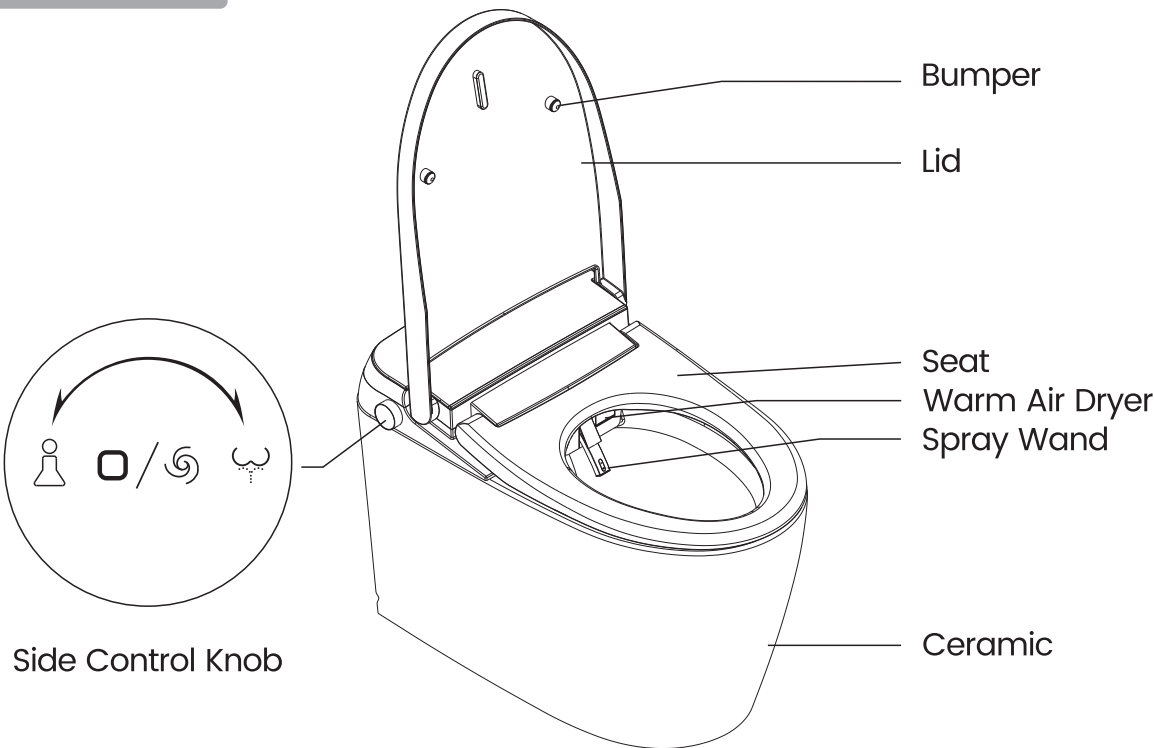

Right side

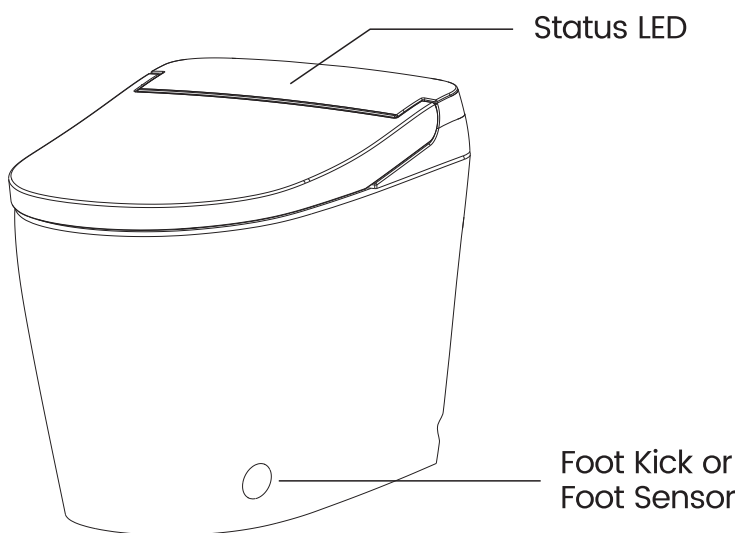


Remote Control

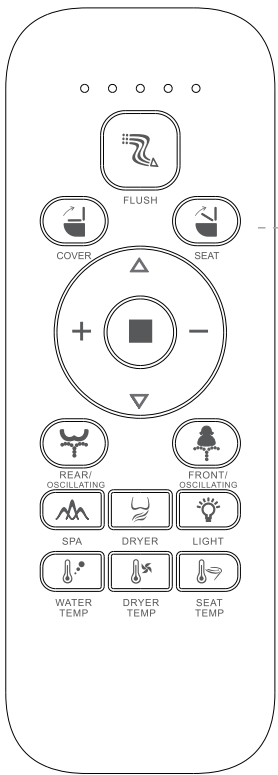

Notes: "COVER" and "SEAT" button is unique to the automatic flip toilet only.

Meanings of the icons on the remote control

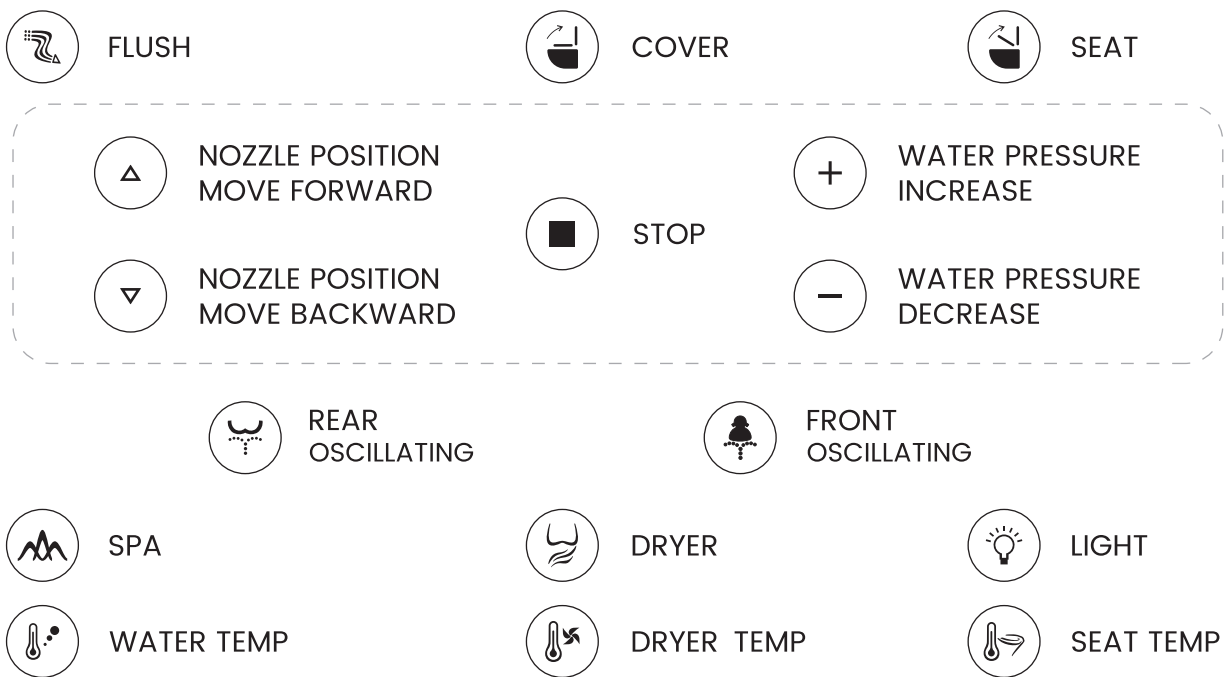

• The product drawing is for reference only, and we reserve the right to modify the appearance of the product. If the appearance of the product is changed, the actual product shall prevail.

TOILET INSTALLATION

Required Tools:


Screwdriver


Wrench



Marker


Tape measure


Caulking gun


Electric drill

Installation Diagram:

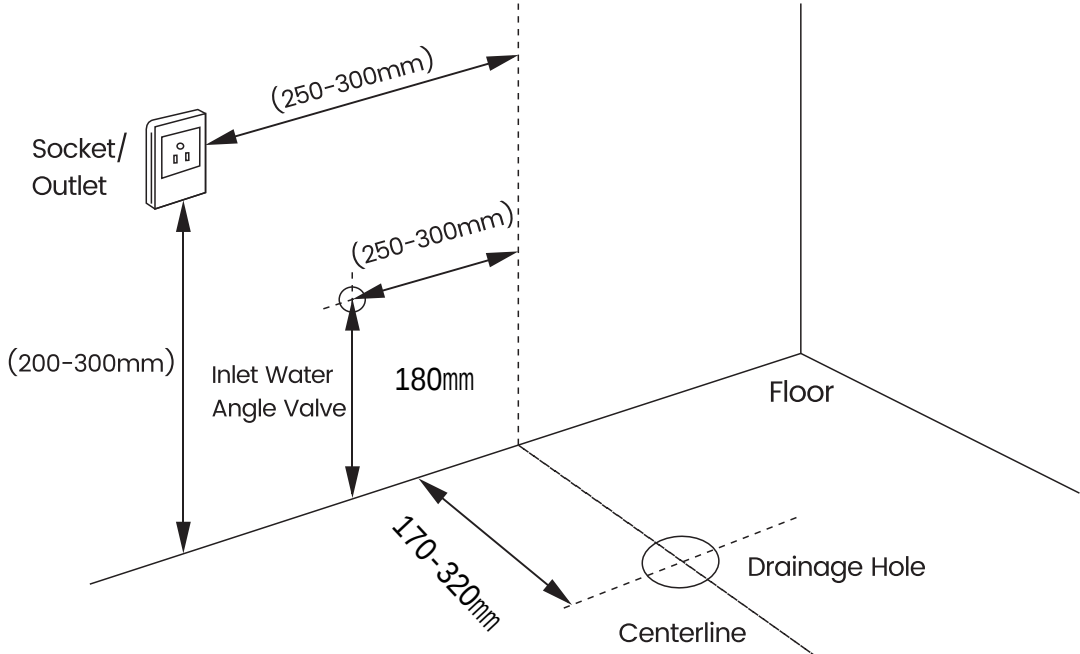



WARNING

Power Outlet Installation Instructions:



- Please ensure that the chosen power outlet has been properly grounded in accordance with the relevant protocols.
- The location of the power outlet should be in close proximity to facilitate the installation and disassembly of this product, while also maintaining a safe distance from the bathtub area.
- It is strongly recommended to select a waterproof-type outlet. Avoid utilizing extension cords to connect the product. Failure to adhere to these instructions could potentially result in fire hazards or electrical shock.

Pre-Installation Precautions:

- Before installation, drain water through the pipe for 1 minutes to avoid impurities remaining in the pipeline.

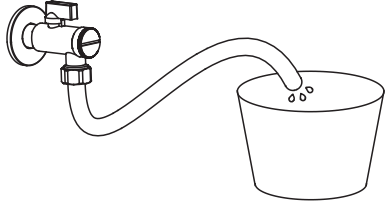

Can adapt to installation accessories

 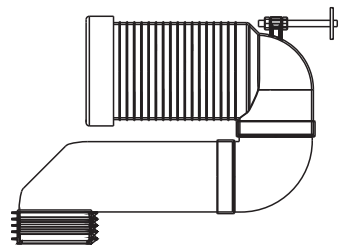



P trap 180mm
S trap 170-320mm

Installation Steps:

1. Install angle valve



Turn the valve into the water outlet.

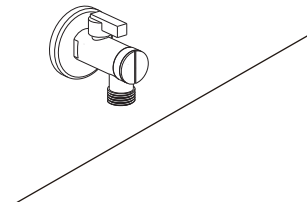


TOILET INSTALLATION

2. Install sewage pipes

Choose the appropriate sewage pipe according to different hole distances. Taking the installation of one sewage pipe as an example, the installation methods of other sewage pipes are similar.

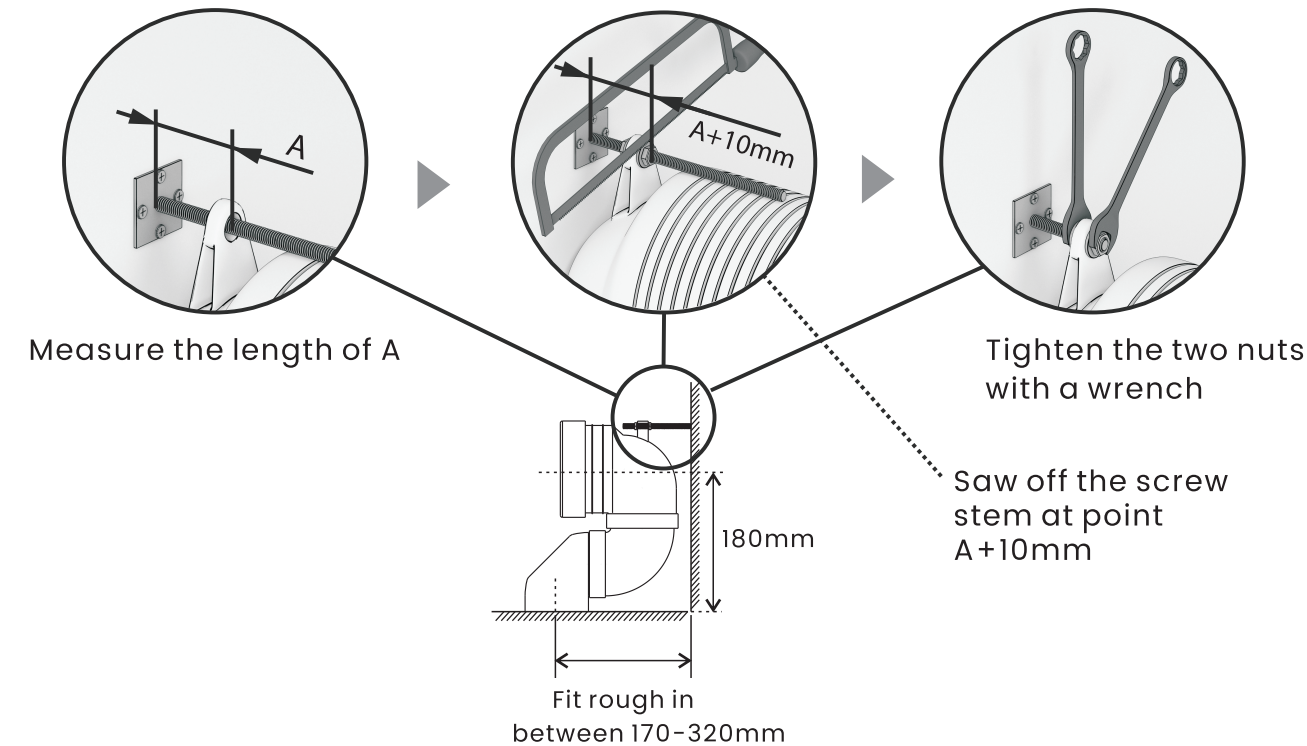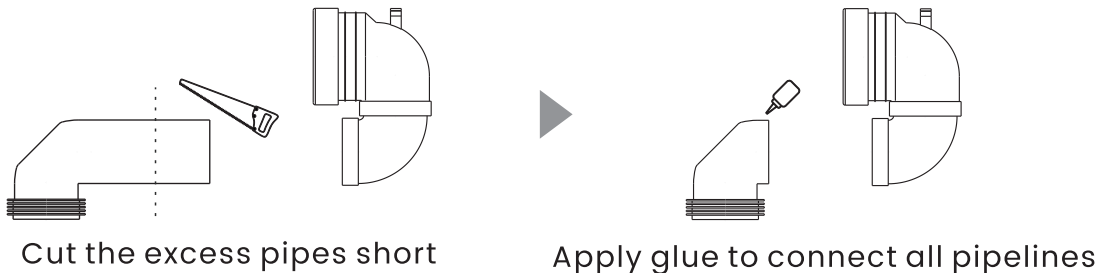


3. Install the toilet

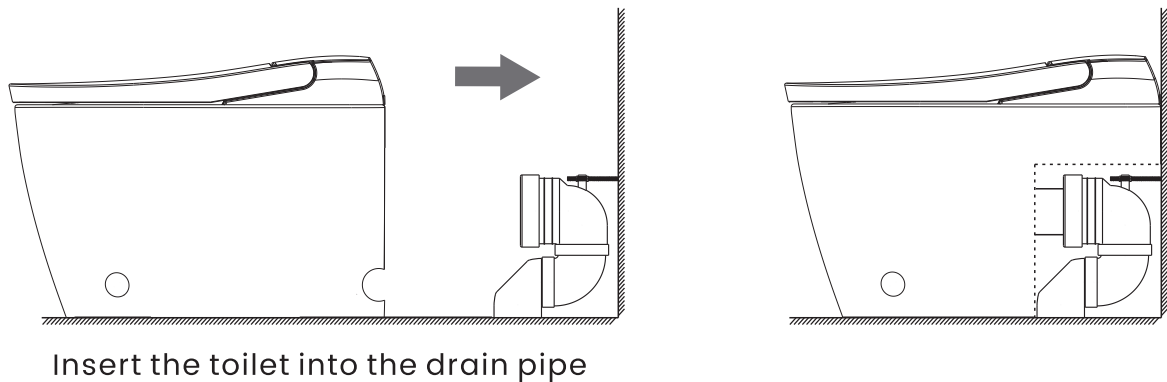

4. Check the sealing performance

Apply a circle of anti-mold sealing silicone at the junction between the toilet and the floor. After the silicone sealant has solidified, plug in the power and slowly open the angle valve. Inspect the seal of all connection points.

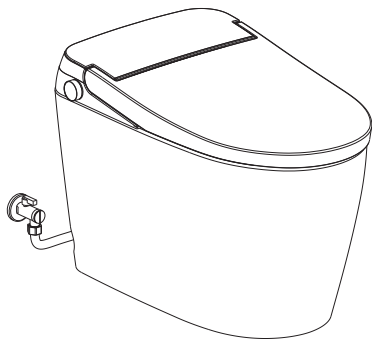


BEFORE USING

1. Turn on the angle valve

- Check the threaded connection to ensure there are no leaks.
- Unscrew the angle valve counterclockwise to fully open it.

(Tips: When opening the angle valve for the first time, the handle may require more torque.)

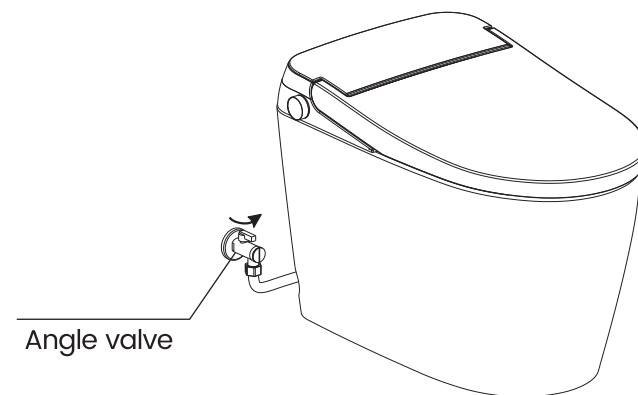


2. Power Connection

Insert the leakage protection plug into the power socket. Press the reset switch. The plug indicator lights up, indicating that the power is on.

Tips:

- Before usage, press the electric leakage test button. The reset switch should pop up, indicating that the leakage protection function is normal.
- Press the TEST button (then the RESET button) every month to ensure proper operation.

Note: Only applicable for models equipped with a leakage protection plug. Please refer to the actual product for details.

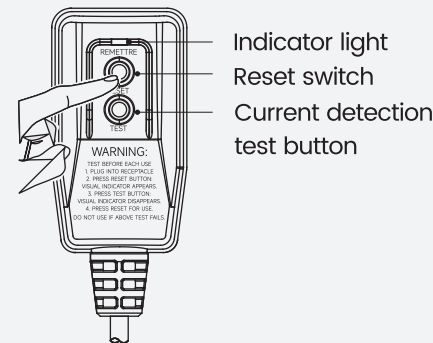

3. Self-inspection

- The main unit buzzer rings "beep".
- After another "beep" from the buzzer, self-inspection is complete.
- Proceed to normal function mode for regular usage.

FUNCTION DESCRIPTION



Rear Wash/Oscillating

Rotate the control knob to the "REAR WASH" mode, or press the "REAR" button on the remote control. The water spray from the rear nozzle will start. Press the button again to activate the "OSCILLATING" mode, in which the washing area is expanded, and the water moves forward and backward. The washing function will automatically cease after 2 minutes.



Front Wash/Oscillating

Rotate the control knob to the "FRONT WASH" mode, or press the "FRONT" button on the remote control. Activation of the water spray from the front outlet of the wand will occur. Press the button again to activate the "OSCILLATING" mode, in which the washing area is expanded, and the water moves in a forward and backward motion. The washing function will automatically cease after 2 minutes.



Warm Air Dryer

The warm air dryer should be used after cleansing. Press and hold the knob for 3 seconds or press the "DRYER" button to activate the warm air dryer. The warm air dryer feature will automatically shut off after 3 minutes.



Flushing By Remote Control

Press the "FLUSH" button to manually flush the toilet. Press the "FLUSH" button twice quickly to initiate a low-volume water flush.



Water Temperature

Press the "WATER TEMP" button to adjust the cleaning water temperature. Press once to display the current temperature. Press again to adjust to the desired level.

- There are 4 levels of water temperature (close/around 34°C- 40°C).




Warm Air Temperature

Press the "DRYER TEMP" button to adjust the air dryer temperature. Press once to display the current temperature. Press again to adjust to the desired level.

- There are 4 levels of air temperature (close/around 50°C- 60°C).

FUNCTION DESCRIPTION

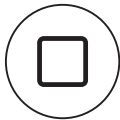	Seat Temperature Press the "SEAT TEMP" button to adjust the seat temperature. Press once to display the current temperature. Press again to adjust to the desired level. • There are 4 levels of seat temperature (close/around 33°C- 41°C).
	Stop Press the "STOP" button to terminate the function of "REAR/FRONT/DRYER".
	Auto Open/Close Lid (Only apply to model with the automatically lid open feature) Press the "COVER" button on the remote control to open/close lid.
	Auto Open/Close Seat (Only apply to model with the automatically seat open feature) Press the "SEAT" button on the remote control to open/close seat.
	Hot And Cold Water Massage Press the "SPA" button briefly during the cleansing feature to activate the massage, which alternates hot and cold water.Press the "STOP" button to terminate all features.
	Pulsate Massage Press and hold the "SPA" button for 3 seconds during the cleansing feature to activate the pulsate massage, with water pressure changing alternately. Press the "STOP" button to terminate all features.
	Night light Press the "LIGHT" button on the remote control to open or close the nightlight.

Adjusting Water Pressure

[+ (water pressure increase) / – (water pressure decrease)]

Press the " + " or " - " icon to increase or decrease water pressure.

Adjusting Nozzle Position

[Δ move forward / ▽ move backward]

Press the " Δ " or " ▽ " icon to adjust the wand position through 3 settings.

Deodorizer

The deodorizer uses activated carbon and operates automatically, with no manual action required.

Energy Saving Mode

When the intelligent toilet is not used for 1 hour, it will automatically enter energy-saving mode, and the seat temperature will automatically adjust to 33°C, entering a low-temperature setting. Upon being seated, it will reheat to the preset temperature.

Automatic Flip (toilet) Seat Cover (This feature is unique to the automatic flip toilet)

- Automatic flip (toilet) seat cover open and close the seat cover by identifying the proximity/presence/departure of the human body;
- When the human body is approximately 30-60cm away from the toilet, the cover will automatically open.
- When the cover is opened, it will automatically close 30 seconds after the human body departs.
- When the seat is lifted, both the seat and the toilet cover will automatically close and initiate a water flush upon the departure of the human body.
- If the flushing function has already been activated during use, no additional flushing will occur after the cover is closed.

FUNCTION DESCRIPTION

Foot Kick Flip the Cover And the Seat (This feature is unique to the automatic flip toilet)

- When the cover is closed, kick the foot kick, it will automatically open the cover;
- When the cover is opened/the seat is closed, kick the foot kick, it will automatically open the seat;
- When the seat is opened, kick the foot kick, it will automatically close the cover, the seat and then flush.

Automatic Flush After Leaving

When a user is seated more than five seconds, it will automatically flush after leaving the seat.

Toilet Bowl Moisture

When the toilet is in standby mode, please follow these steps to activate the moisture function:

- To toggle the 'Toilet Bowl Moisture' function, rotate and hold the knob to the 'REAR WASH' position for 3 seconds until you hear a beep.
- Within 2 seconds after the beep, press the 'FLUSH' button on the remote control.
- Please ensure that all steps are followed correctly for proper activation of the moisture function.

Pairing the Remote Control to the Toilet

- On standby mode, rotate the knob towards the "REAR WASH" direction and hold it for about 3 seconds. After hearing the prompt sound, release it. Wait for about 2 seconds before hearing the prompt sound again, indicating that the remote control has entered the code matching mode. Press any button on the remote control to successfully match the code.
- Each remote control corresponds to a unique code. Before using the designated toilet, it is necessary to pair the remote control once in order to use it. Otherwise, the remote control will not operate.

Control Knob:


There are 4 functions of the side control knob: **[Dryer/Flush]**, **[Rear Wash]**, **[Front Wash]**, **[Stop]**.

When the toilet is not occupied:

- Press the knob to flush.
- Press and hold the knob for 5 seconds to power on/off the toilet.

When the toilet is occupied:


- Turn the knob clockwise to activate spray wand and start rear wash.
- Turn the knob anti-clockwise to activate spray wand and start front wash.
- Press and hold the knob for 3 seconds, the toilet will first activate the flushing function before drying.
- One-Key Mode: Turn the knob towards the Rear Wash/ Front Wash direction and hold for 3 seconds to activate the one-key mode. The product will automatically perform the following steps: Rear Wash/ Front Wash → Flushing → Drying.

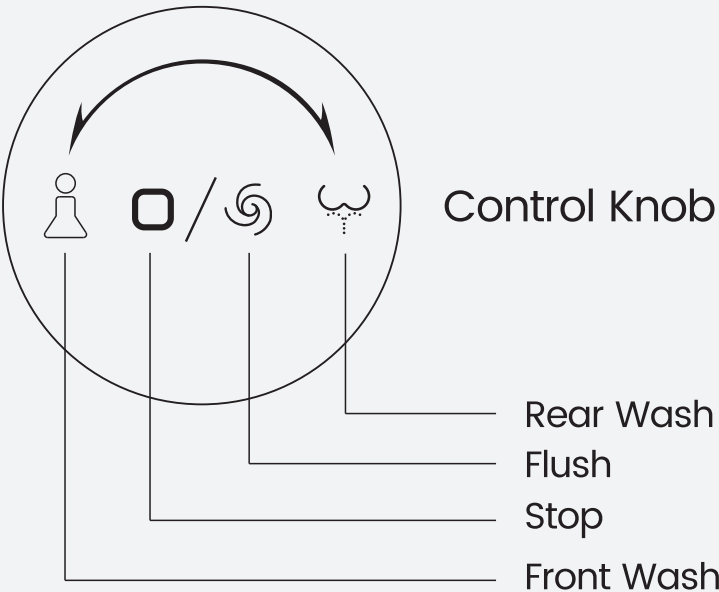

DAILY MAINTENANCE

Main unit care and maintenance

1. Turn off power supply before performing maintenance.
2. Wipe stains with a soft damp cloth.

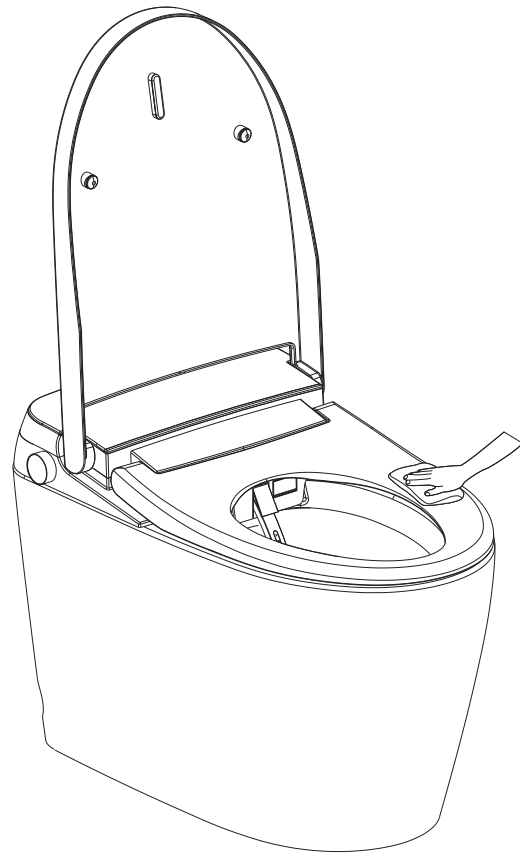


3. After cleaning, reconnect the toilet to the power supply.


Maintenance of inlet filter screen

Maintenance is required when the system is under normal water pressure but experiencing poor flush performance.

1. Turn off power and the angle valve.
2. Unscrew angle valve nut.

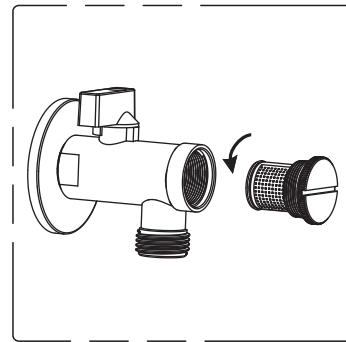

3. Use a brush to clean inlet filter screen.

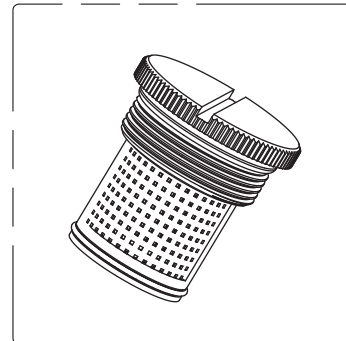


4. Reinstall inlet filter screen.

5. Turn on the angle valve and reconnect the power. The toilet will return to normal operation after self-inspection.

Spray nozzle maintenance and care

When there are stains on the nozzle:

1. Open the cover and seat;
2. With the product connected to water and electricity, rotate the knob towards the front wash direction and hold it until you hear the prompt sound. This will extend the nozzle and clean water will flow from the self-cleaning port.
3. Gently brush the nozzle with a small brush;

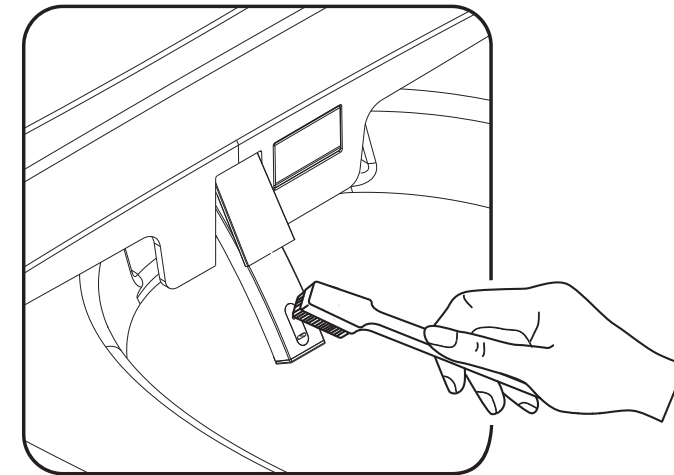

4. Short press the knob or press the "STOP" button on the remote control to retract the nozzle.

TROUBLESHOOTING GUIDE

Problem	Cause	Solution
No Water from Nozzle	Water inlet hose bent to cause blocking	Solve the problem of bending of water inlet hose
	Inlet valve is off	Turn on the inlet valve
	Water supply is cut off	Connect water supply and wait for the water
	The sensor does not work	Adjust your sitting position to make sure sensor is on work
Weak water cleaning	Water inlet hose bent to cause partial blocking	Solve the problem of bending of water inlet hose
	Inlet valve is not fully turned on	Turn on the inlet valve fully
	Inlet filter blocked	Clean the filter
Low water temperature	The water temperature is setted on normal temperature level	Reset the water temperature
Low seat temperature	The seat temperature is set on normal temperature level	Reset the seat temperature
Low wind temperature	The wind temperature is set on normal temperature level	Reset the wind temperature
Stops in the middle of use	Dryer features stop automatically after 3 minutes of continuous use	Restart the dryer function
	Cleansing features stop automatically after 2 minutes of continuous use	Restart the Cleansing function
	Seat sensor faile to detect user presence	Adjust your sitting position to ensure the sensor is activated
Spray rod cannot retract	Power off	Push back the rod lightly and wait for power to be restored
	Get stuck by impurities	Clear away the impurities

Problem	Cause	Solution
Spray rod cannot extend	Power is off	Gently push the spray rod forward and wait for the power to be restored
	Not seated in the sensing area	Sit properly within the sensing area
Remote control display not functioning	Battery polarity reversed	Reinsert the battery with correct polarity
Toilet leaking	Close the angle valve, inspect all water pipes, and contact a professional.	
 Caution	If the problems cannot be resolved using the methods above, please turn off the power and the angle valve, then contact service providers for maintenance.	
	If the leakage circuit breaker frequently trips, indicating electrical leakage, turn off the power and the angle valve, then contact the service provider for maintenance.	

Warranty Instructions

If you encounter any malfunction during use, please stop using the product immediately and unplug it. You can directly call our nationwide after-sales service hotline, and our after-sales staff will contact you as soon as possible.

Warning

If the user contacts an unauthorized third-party repair service, any consequences resulting from such action shall be borne by the user.

Product Warranty Regulations

1.If a malfunction occurs within one year from the date of purchase due to proper use, please contact after-sales service and provide the product's SN code or the invoice as valid proof.

2. Situations not covered under the free repair service within the warranty period include:

- ① Damage caused by improper use or storage by the user;
- ② Damage caused by self-installation or self-repair by the user;
- ③ Inability to present valid proof (neither an invoice nor a product SN code), or if the proof is unclear, unverifiable, or has been altered;
- ④ Damage caused by force majeure (e.g., typhoons, snowstorms, hail, earthquakes, mudslides, etc.);
- ⑤ Damage caused by transportation, unloading, or compression.

3. For products that require repair and support after the warranty period has expired, a service fee, labor fee, and material fee will be charged accordingly.

Warranty Receipt

The following receipt is an important proof of warranty. Please do not remove it by yourself.

Product Model:	Dealer:	Purchase Date:
Serial Number:	User Name:	Contact Number:
Purchase Date:	Address:	
Repair Date:	Service Type: ☐ On-site Service ☐ Drop-off Repair	
Repair Technician:	Service Center:	Repair Date:
Repair Details:	Fault Description:	Repair Technician:
	Repair Details:	Cause of Fault:
	Product Barcode:	User Signature: